



## **Installation Instructions**

Complete set sensor-controlled tailgate opening Seat Ateca KH7

v1.0 (05.02.2019)



## Contents

| 1         | Liability Exclusion                                    | 3         |
|-----------|--|-----------|
| 2         | Copy Right   | 4         |
| 3         | General notes  | 4         |
| 4         | Safety instructions                                    | 5         |
| 5         | Requirements for the determinable operation            | 5         |
| 6         | How to connect a cable to another                      | 6         |
| 7         | Note Cable Inscription/Color                           | 7         |
| 8         | Safety Instructions for working on Airbags             | 8         |
| 9         | Assembly Instructions                                  | 9         |
| 10        | Disassembly covering driver's side                     | 10        |
| 11        | Disassembly knee-airbag driver's side front            | 11        |
| <b>12</b> | Disassembly back side covering driver's side           | <b>12</b> |
| 13        | Disassembly rear bumper                                | 14        |
| 14        | Cable routing back to front                            | 15        |
| 15        | Connection cable set / ground                          | 17        |
| 16        | Assembly sensors rear bumper                           | 18        |
| 17        | Coding with Coding Interface                           | 19        |
| 18        | Coding Interface                                       | 19        |
| 19        | Bus rest   | 20        |
| 20        | Activation function sensor-controlled tailgate opening | 21        |
| <b>21</b> | Connection/Troubleshooting cable set                   | 21        |



## 8 Safety Instructions for working on Airbags

Working on Airbag systems has to be executed exclusively by especially trained qualified personnel.

Notes for working on Airbag systems:

- Remove the ignition key and disconnect the battery.
- Wait at least 5 minutes. Only then you can work on the Airbag systems.
- Discharge yourself before you work on an Airbag unit by touching the latch of the door.
- Airbag units which have been removed are always put down face up.
- During the works on the Airbag system you have to be very careful.
- Additionally, the safety notes of the corresponding manufacturer are valid.

Kufatec GmbH & Co. KG does not assume liability in any case of damage!