



Installation Instructions

LED taillights with dynamic blinker $_{\rm v1.0~(22.07.2019)}$



Contents

1	Liability Exclusion	3
2	Copyright	4
3	General notes	4
4	Safety Instructions	5
5	Requirements for the intended use	5
6	How to connect a cable to another	6
7	Note Cable Inscription/Color	7
8	Assembly Instructions	8
9	Assembly Note	9
10	Disassembly tailgate covering (sedan)	10
11	Disassembly rear lights (sedan)	11
12	Disassembly rear lights tailgate (sedan)	12
13	Cable routing / Connection cable set (Variation EU-vehicles)	13
14	Cable routing / Connection cable set (Variation US to EU-vehicles)	15
15	Connection control unit (Variation EU-vehicles)	16
16	Connection control unit (Variation US to EU-vehicles)	18
17	Coding with Coding Interface	19
18	Coding Interface	19
19	Assembling the vehicle	19
2 0	Bus rest	2 0
21	Additional vehicle function	2 0
22	Connection/Troubleshooting cable set	21
23	Connection/Troubleshooting cable set	22



8 Assembly Instructions

The following illustration shows the cable routing as well as the position of the individual components.

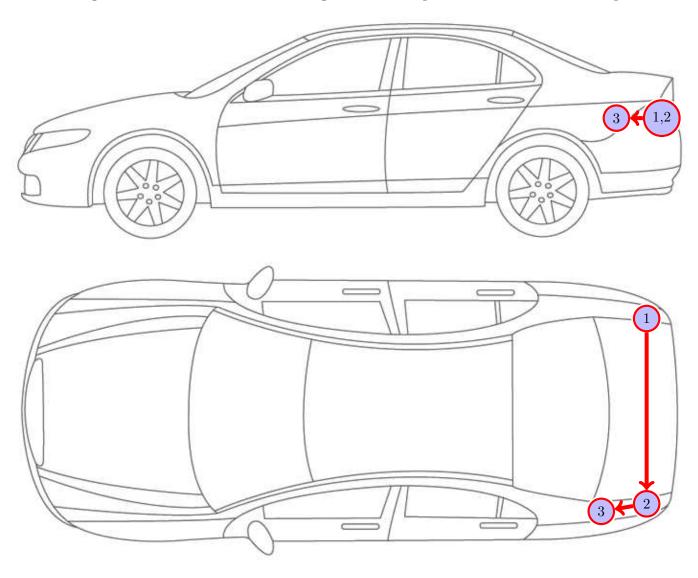


Figure 3: Vehicle Overview

- 1 Taillights right inside and outside
- 2 Taillights left inside and outside
- 3 Connection comfort control unit

Please be aware, that this overview is only for **illustration purposes**. Always lay the cable set in the **most convenient and shortest way** possible. For a detailed description of the cable routing, please refer to the relevant sections of the following manual.